




# Wiringkit

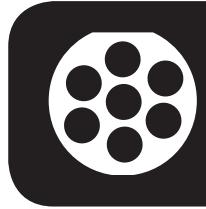

D	Einbauanleitung
GB	Installation instructions
F	Consignes de montage
NL	Montagehandleiding
DK	Montagevejledning
N	Monteringsinstruksjon
S	Installationsanvisning
FIN	Asennusohje
I	Intruzioni per il montaggio
E	Instrucciones de montaje
P	Instuções de montagem
GR	Οδηγίες εγκατάστασης
CZ	Návod k montáži
SLO	Navodilo za vgradnjo
SK	Montážny návod
PL	Instrukcja montazu
TR	Montaj talimatı
H	Beépítési útmutató
HR	Upute o ugradnji
BUL	инструкции за монтаж
RO	Instructiuni de montaj
RU	Инструкция по монтажу и установке
LT	Montavimo informacija
LV	lemondešanas pamaciba
EST	Paigaldusjuhend

**703373**  
**BMW**



- **1er Limousine 5-Türer** F20 09/11 → 02/14
- **1er Limousine 3-Türer** F21 09/12 → 02/14

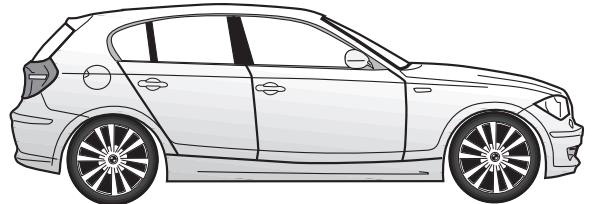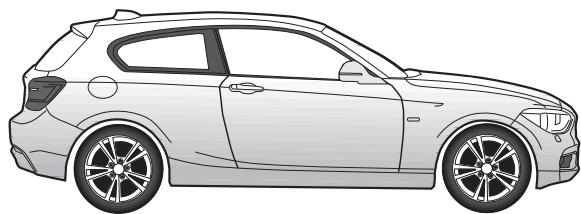




**BRINK®**

Your perfect fit  
brink.eu




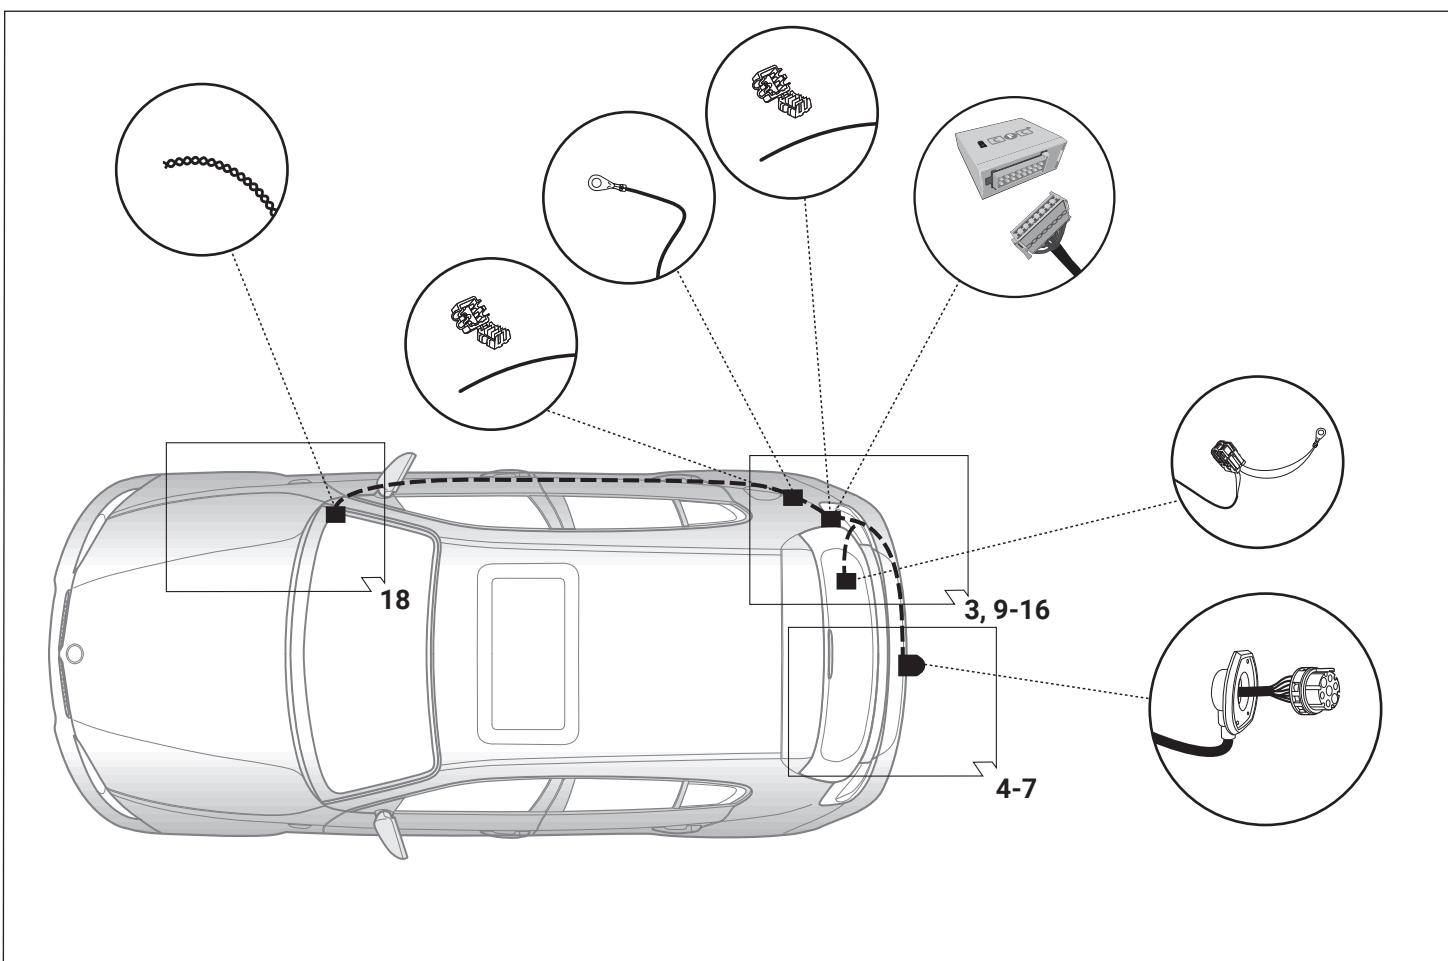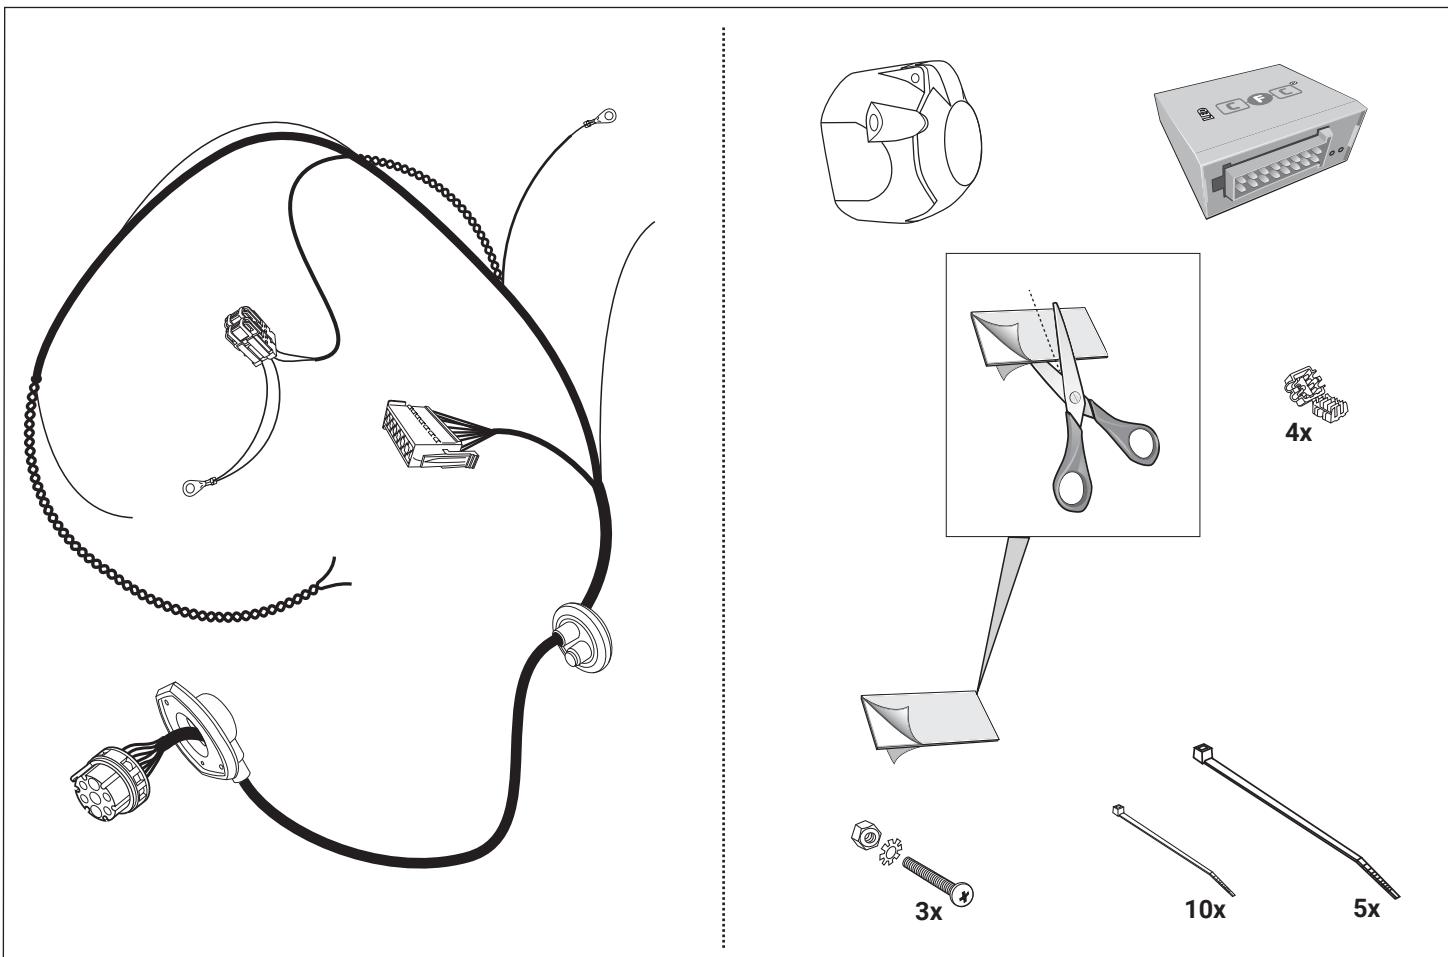

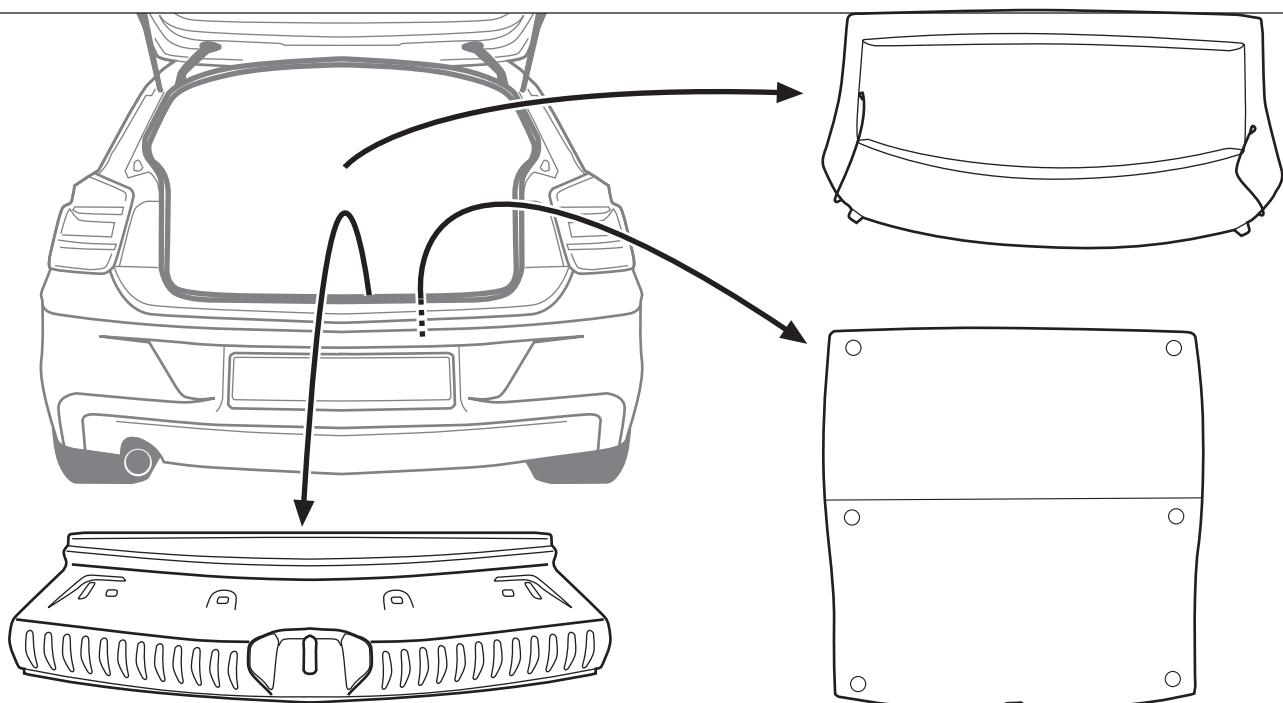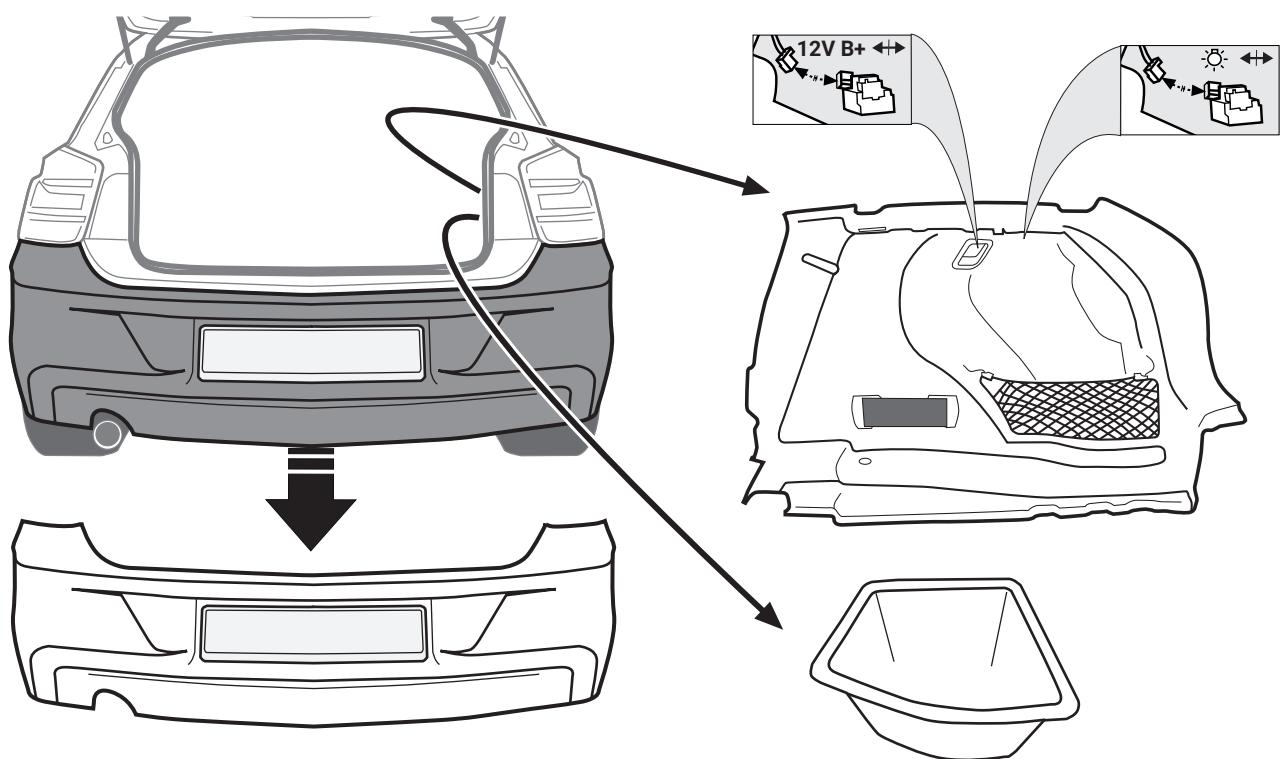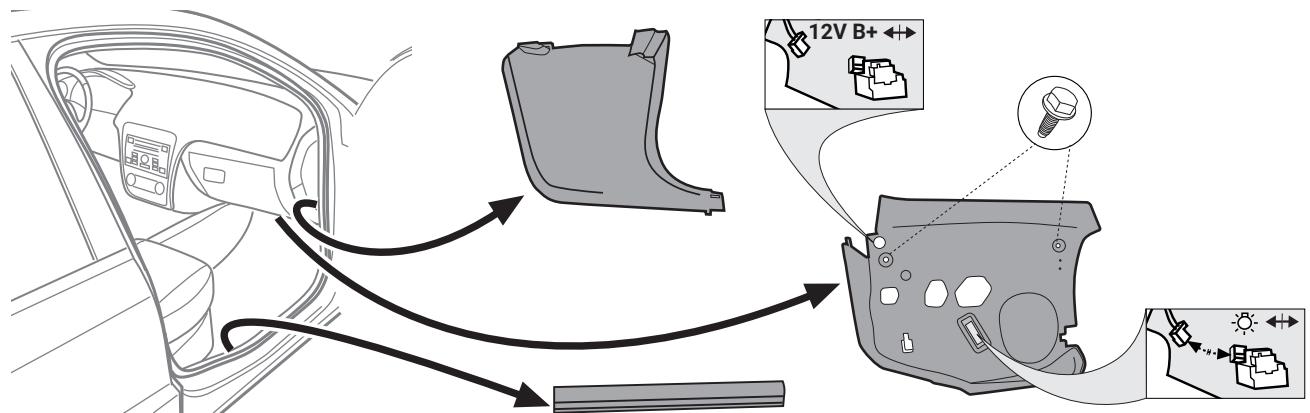


**a****b****c**

2

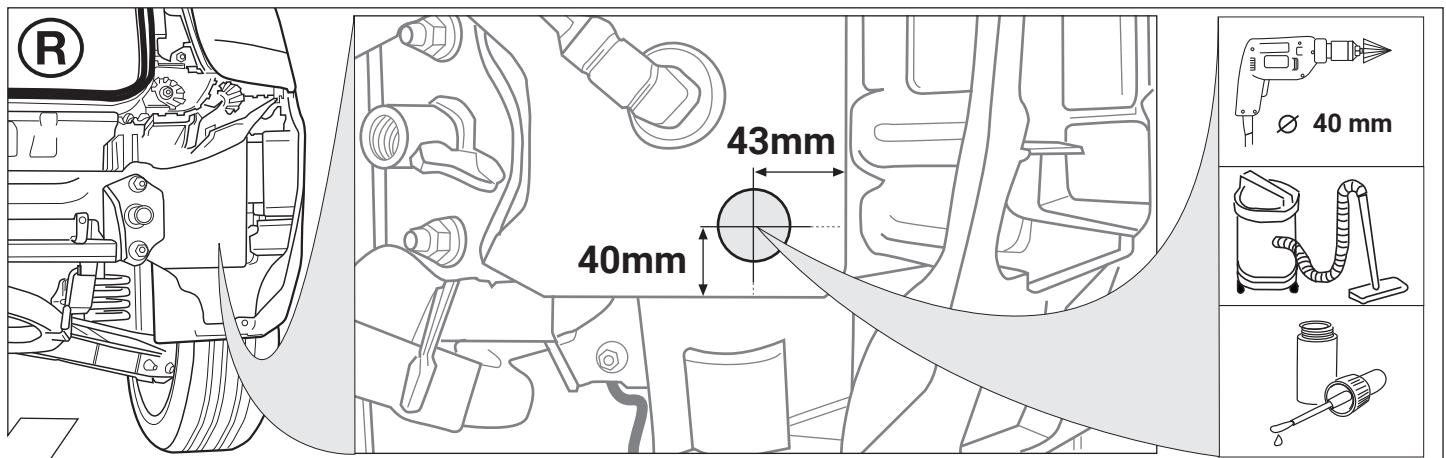


3

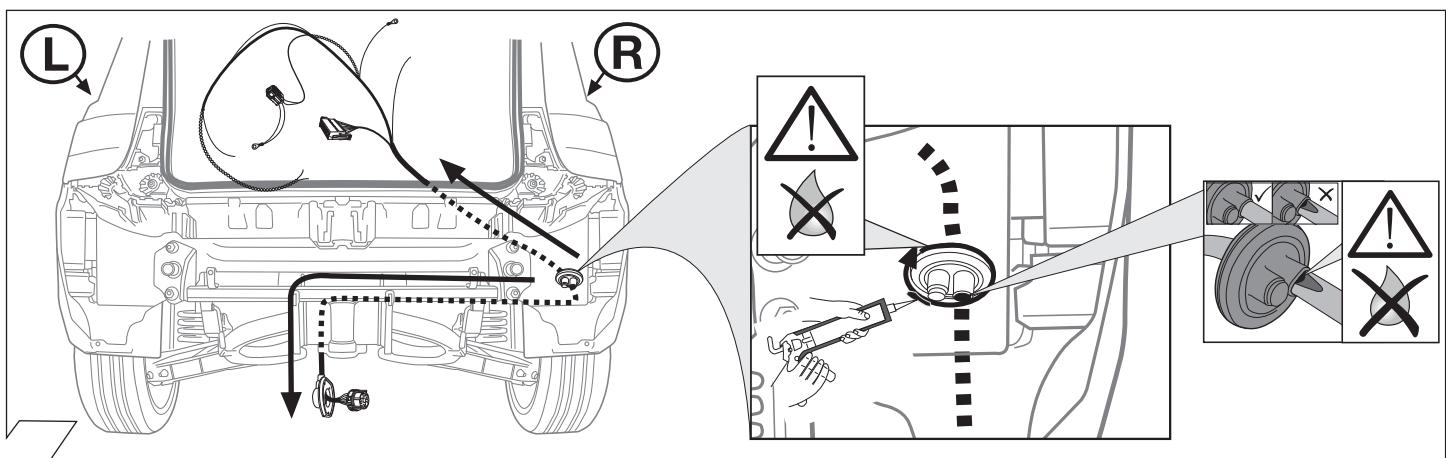


4

ISO 1724			
	Belegung der Steckdose / Maximale Ausgangsleistung Socket configuration / Maximum power output Correspondance des contacts de la prise / Puissance de sortie maximale Abbinamento della presa / Uscita di alimentazione massima Indeling van de stekkerdoos / maximaal uitgangsvermogen		
	1/L	BK/WT	21W
1	WT	WT	42W
2	3/31	BR	
3	4/R	BK/GN	21W
4	5/58-R	GY/RD	52W
5	6/54	BK/RD	63W
6	7/58-L	GY/BK	52W

5

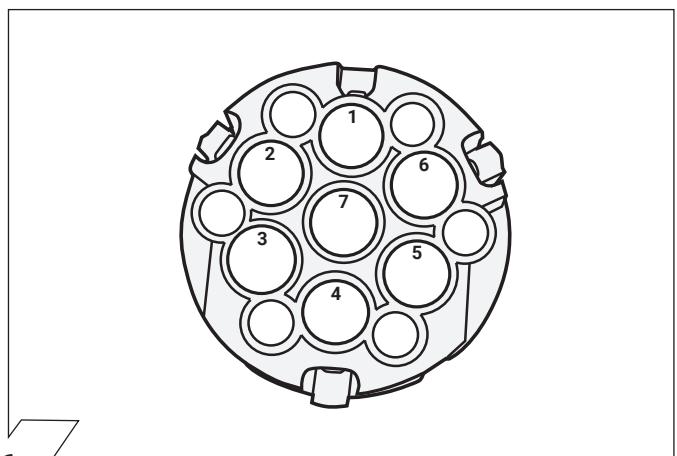


6

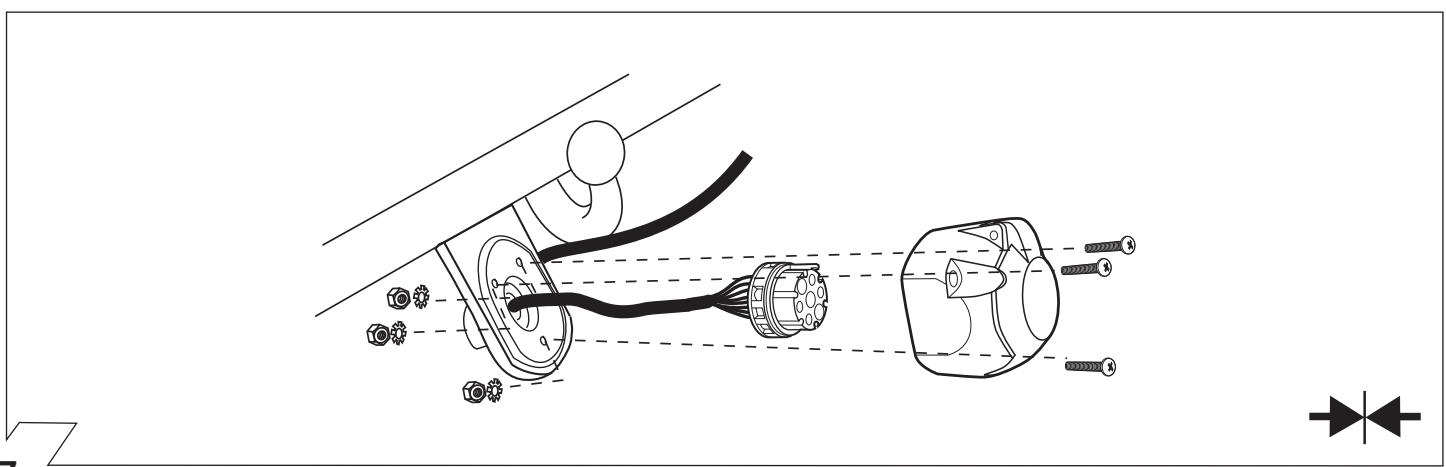


7




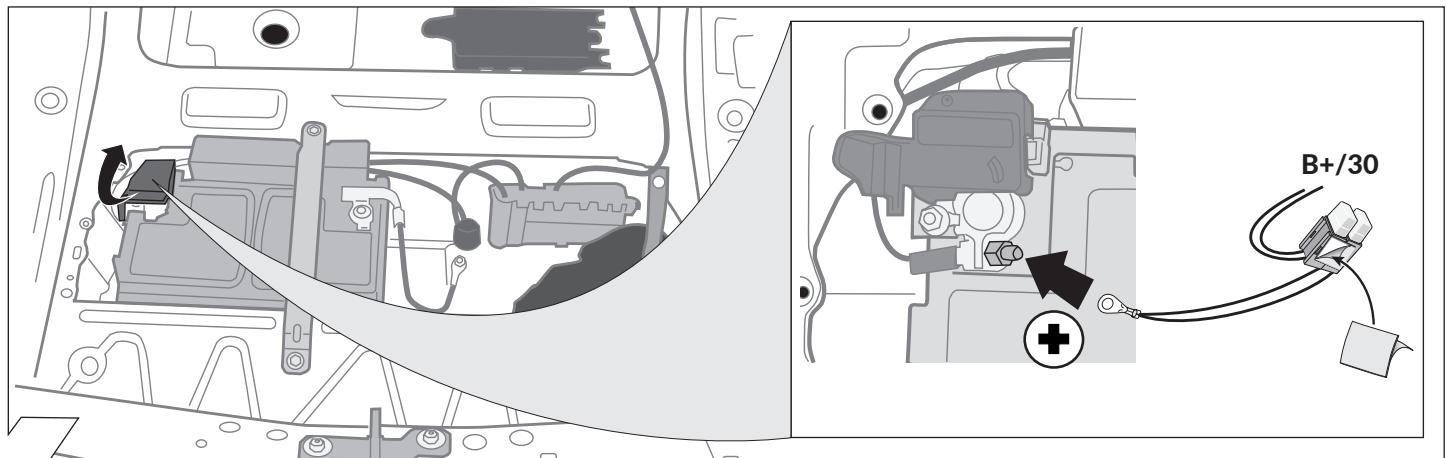


12

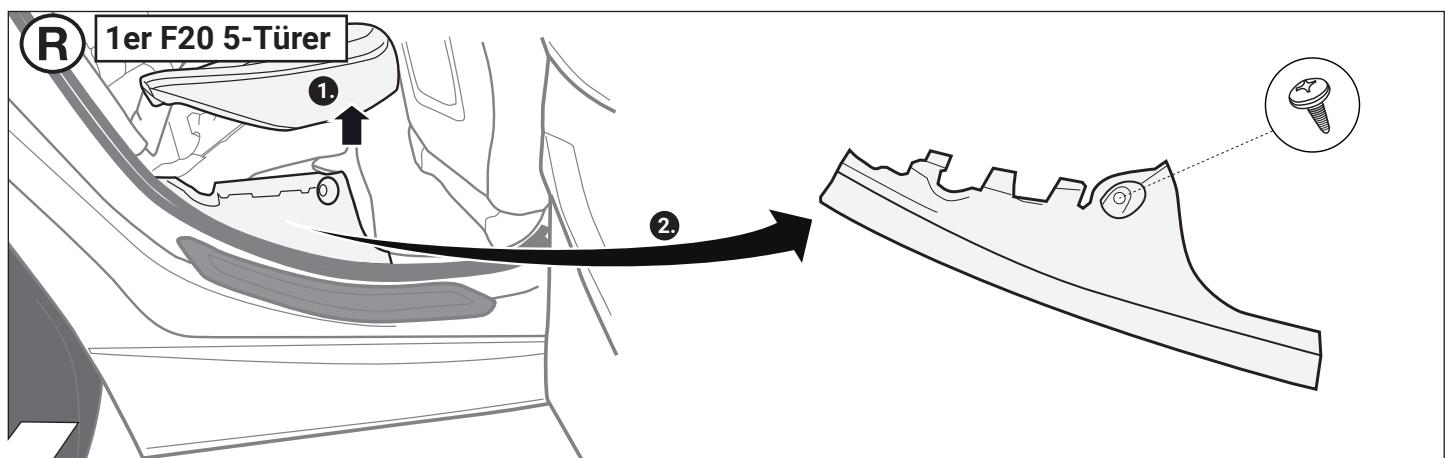

13

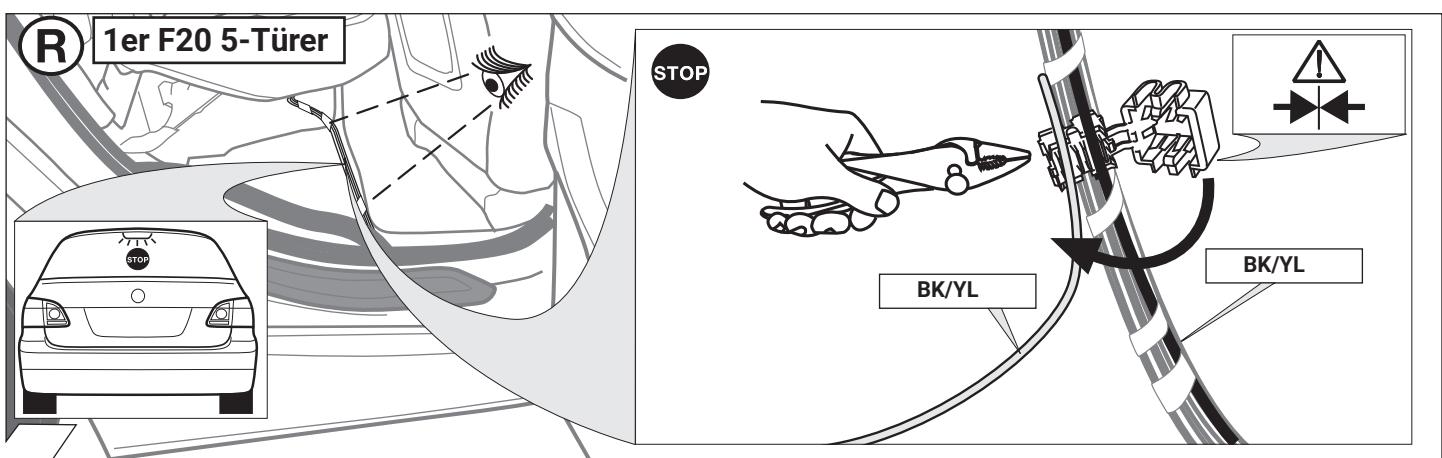


14

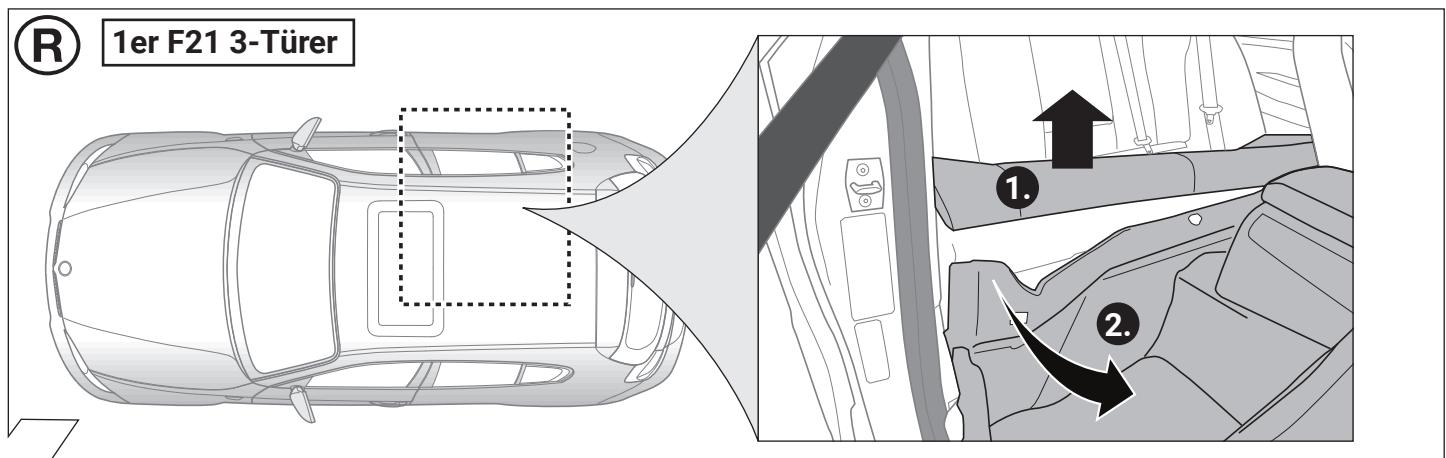

15

**R**

1er F21 3-Türer


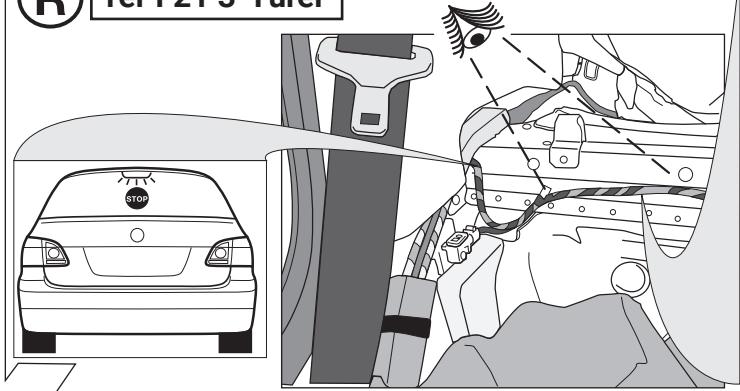


16


**STOP**

BK/YL

BK/YL

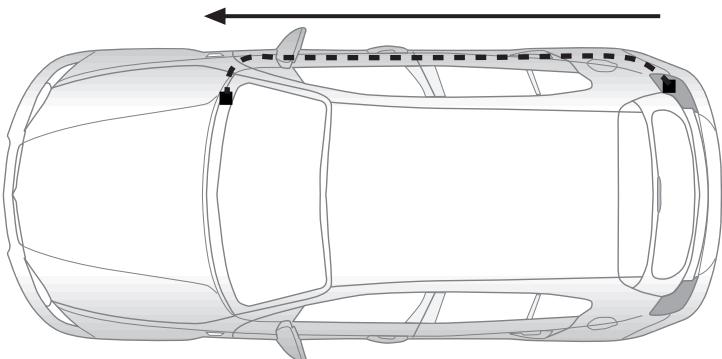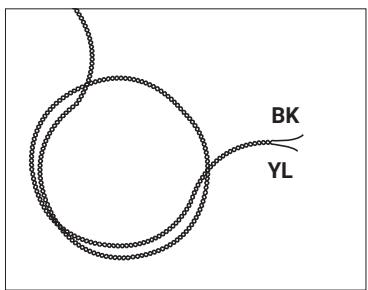


17


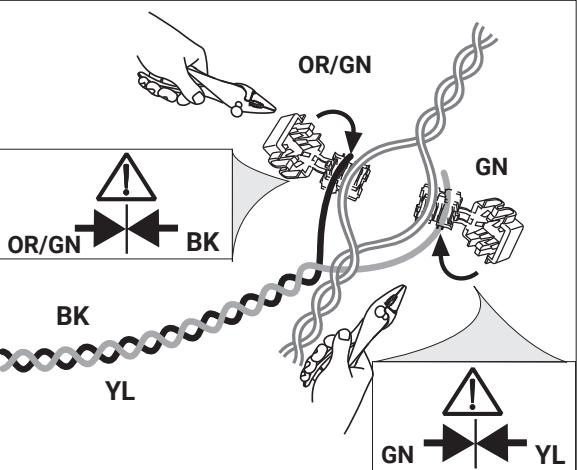


**CAN-Data Wire**


GN  
OR/GN

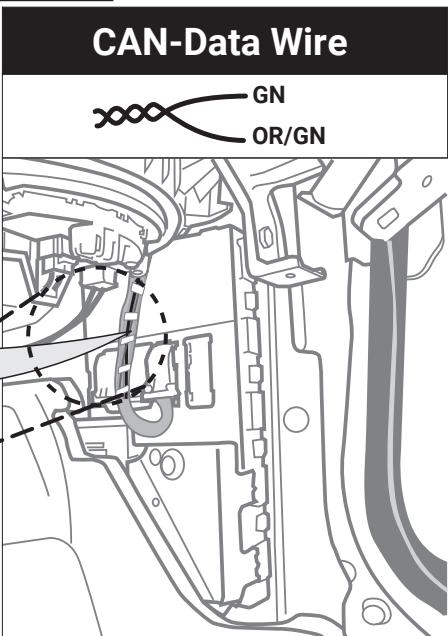


18

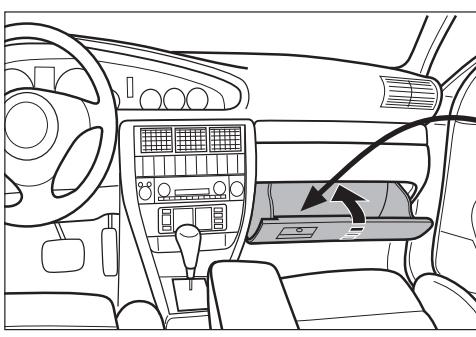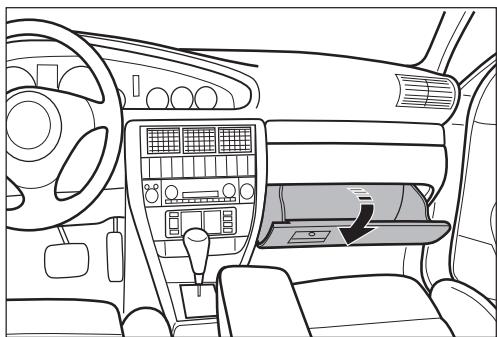


19

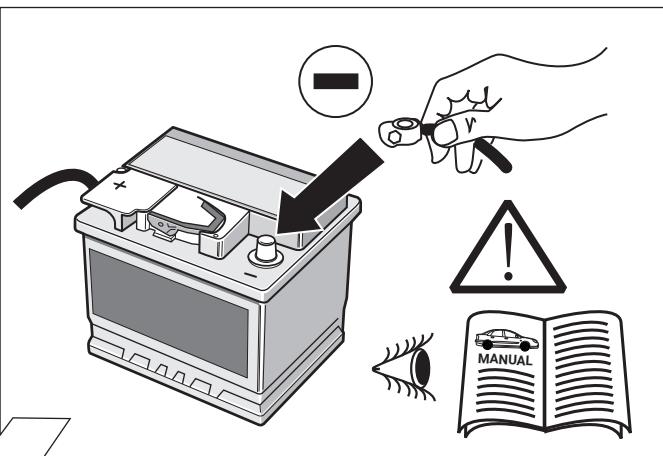

20

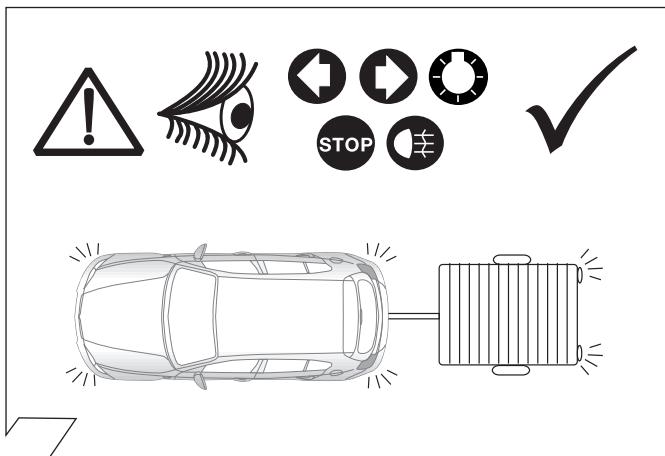


21

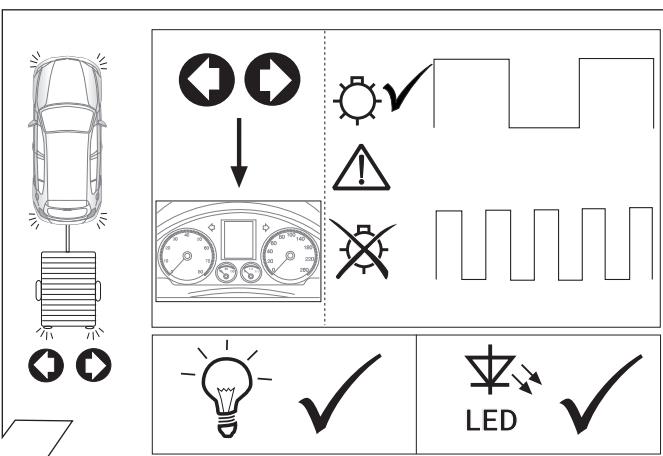

22



23

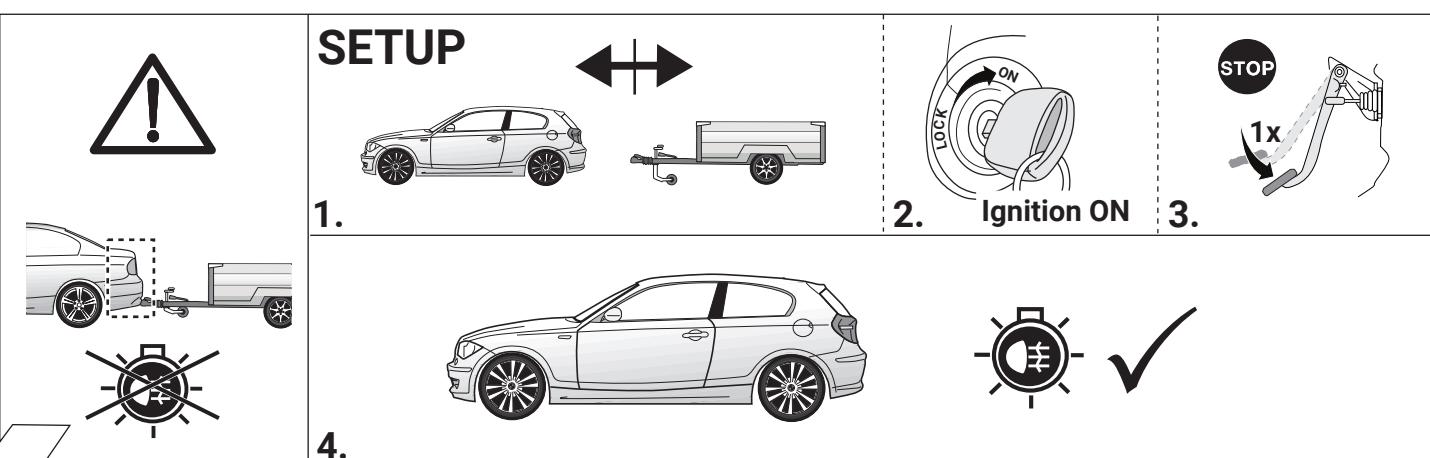

24

